


## BMW OPS/GT1 DIS operation Manuel


First step:

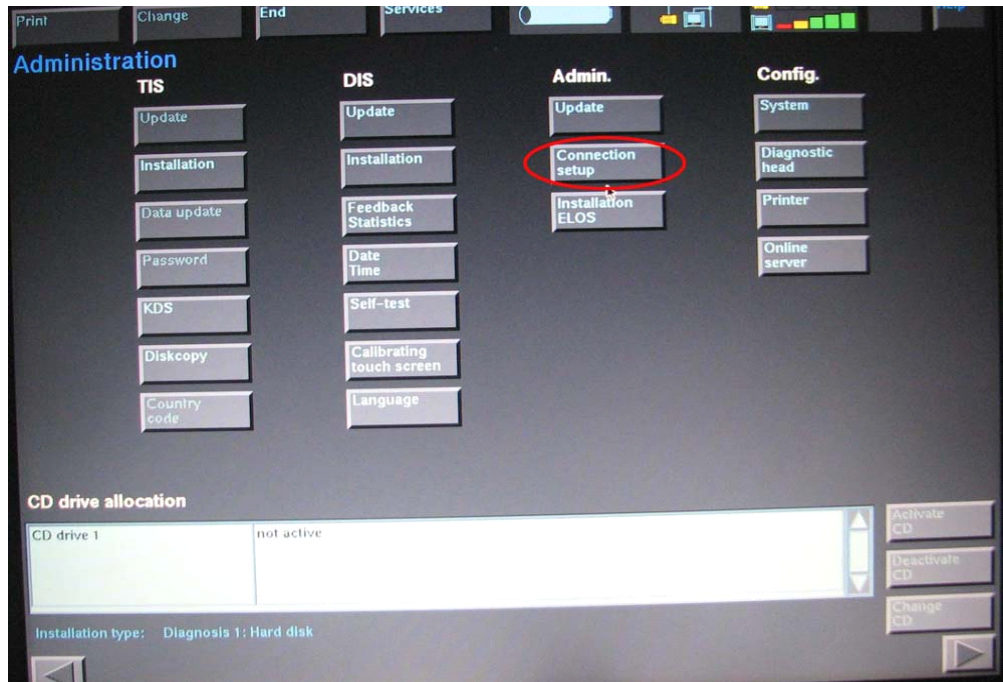

Second step:



Third step:

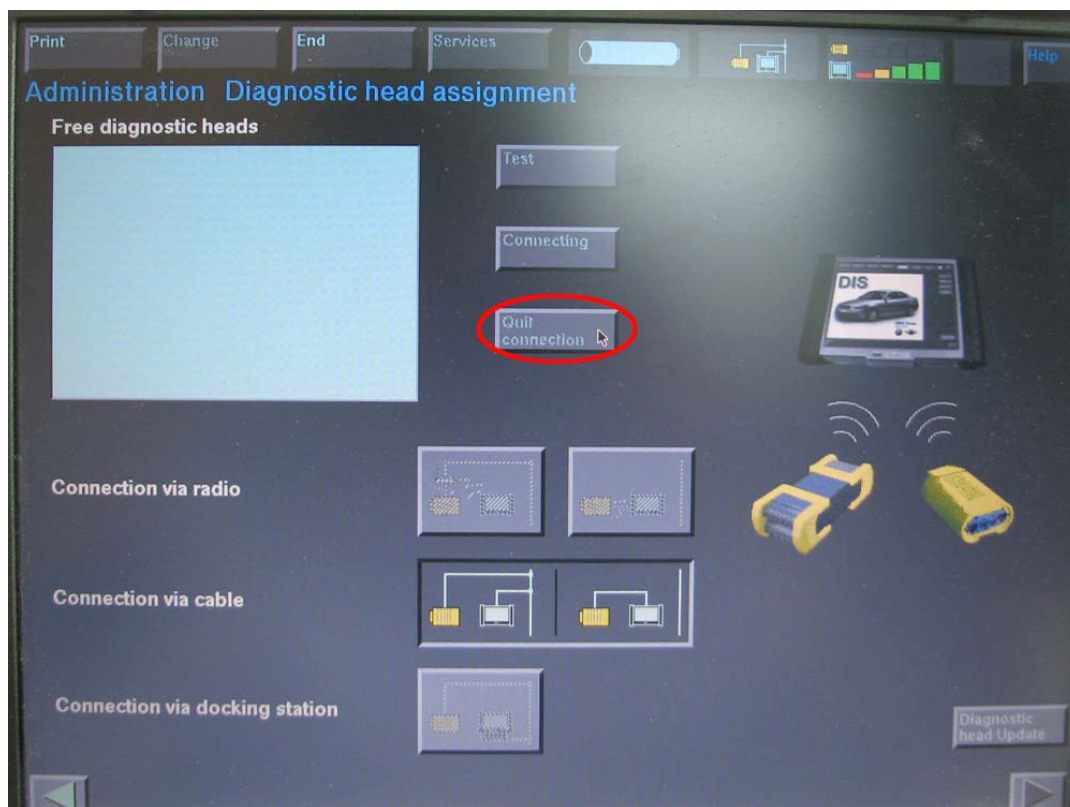


Fourth step:





Fifth step:

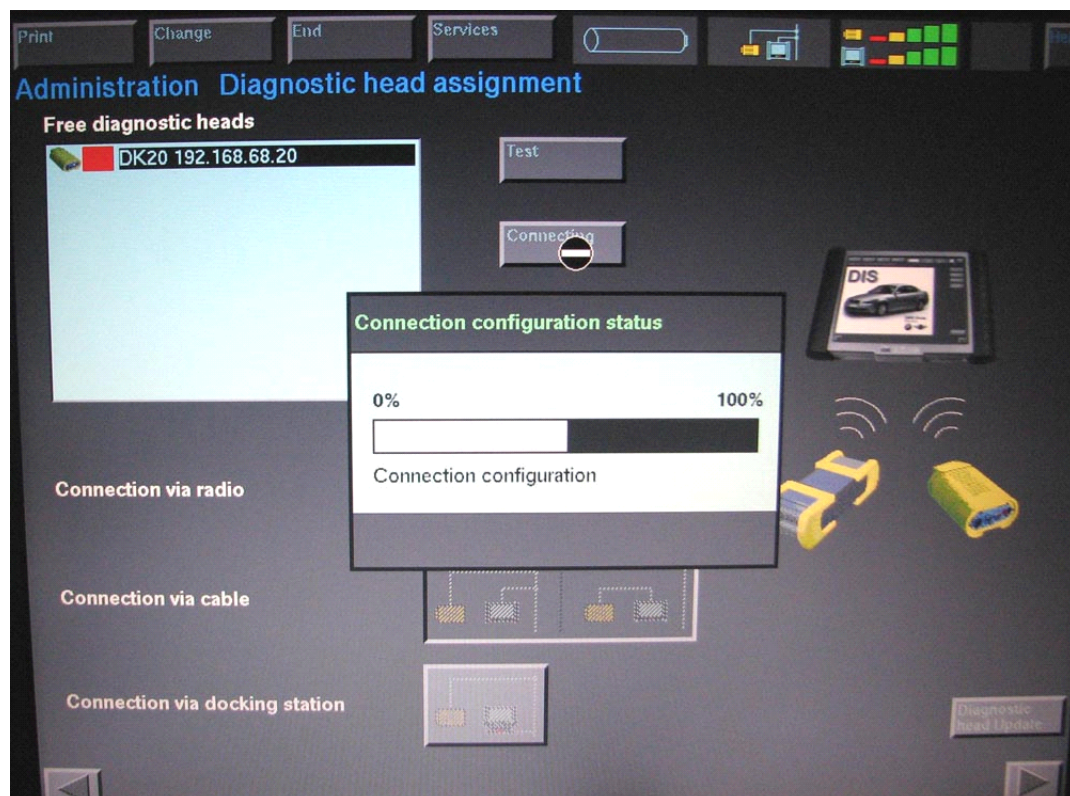

Sixth step:

