

LIST

<u>1. MED17.1 – TC1796 INTERNAL FLASH</u>	<u>1</u>
<u>2. MED17.1.1 – TC1796 INTERNAL FLASH</u>	<u>2</u>
<u>3. VAG MED17.5 – TC1766 INTERNAL FLASH</u>	<u>3</u>
<u>4. VAG MED 17.5.1 – TC1796 INTERNAL-EXTERNAL FLASH</u>	<u>4</u>
<u>5. VAG MED 17.5.2 – TC1767 INTERNAL FLASH</u>	<u>5</u>
<u>6. VAG MED 17.5.5 - TC1766 INTERNAL FLASH</u>	<u>6</u>
<u>7. VAG MED 17.5.20 - TC1766 INTERNAL FLASH</u>	<u>7</u>
<u>8. VAG EDC17 CP14/CP20 - TC1796 INTERNAL – EXTERNAL FLASH.....</u>	<u>8</u>
<u>9. VAG EDC17 CP04 - TC1796 INTERNAL FLASH</u>	<u>9</u>
<u>10. VAG EDC17 C46 – TC1767 INTERNAL FLASH.....</u>	<u>10</u>
<u>11. VAG EDC17 CP24 – TC1796 INTERNAL-EXTERNAL FLASH.....</u>	<u>11</u>
<u>12. VAG EDC17 CP44 - TC1797 INTERNAL FLASH</u>	<u>12</u>
<u>13. VAG EDC17 U01 - TC1766 INTERNAL FLASH.....</u>	<u>13</u>
<u>14. VAG EDC17 U05 – TC1796 EXTERNAL FLASH.....</u>	<u>14</u>
<u>15. VAG/PORSCHE SIEMENS CONTINENTAL SDI 3 - TC1796 INTERNAL-EXTERNAL FLASH</u>	<u>15</u>

Content

1. MED17.1 – TC1796 Internal Flash




Picture 1 MED17.1 terminal




Picture 2 MED17.1 PCB

2. MED17.1.1 – TC1796 Internal Flash

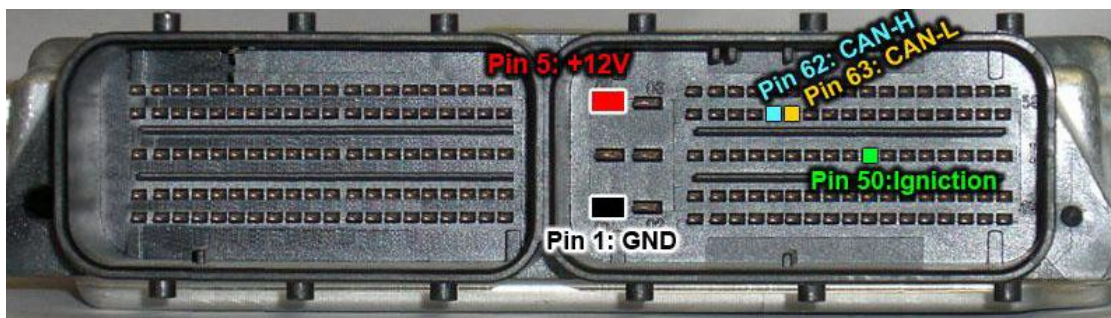

Picture 3 MED17.1.1 terminal

Note: In some ECU the CAN-H can be the pin 79 and the CAN-L is the pin

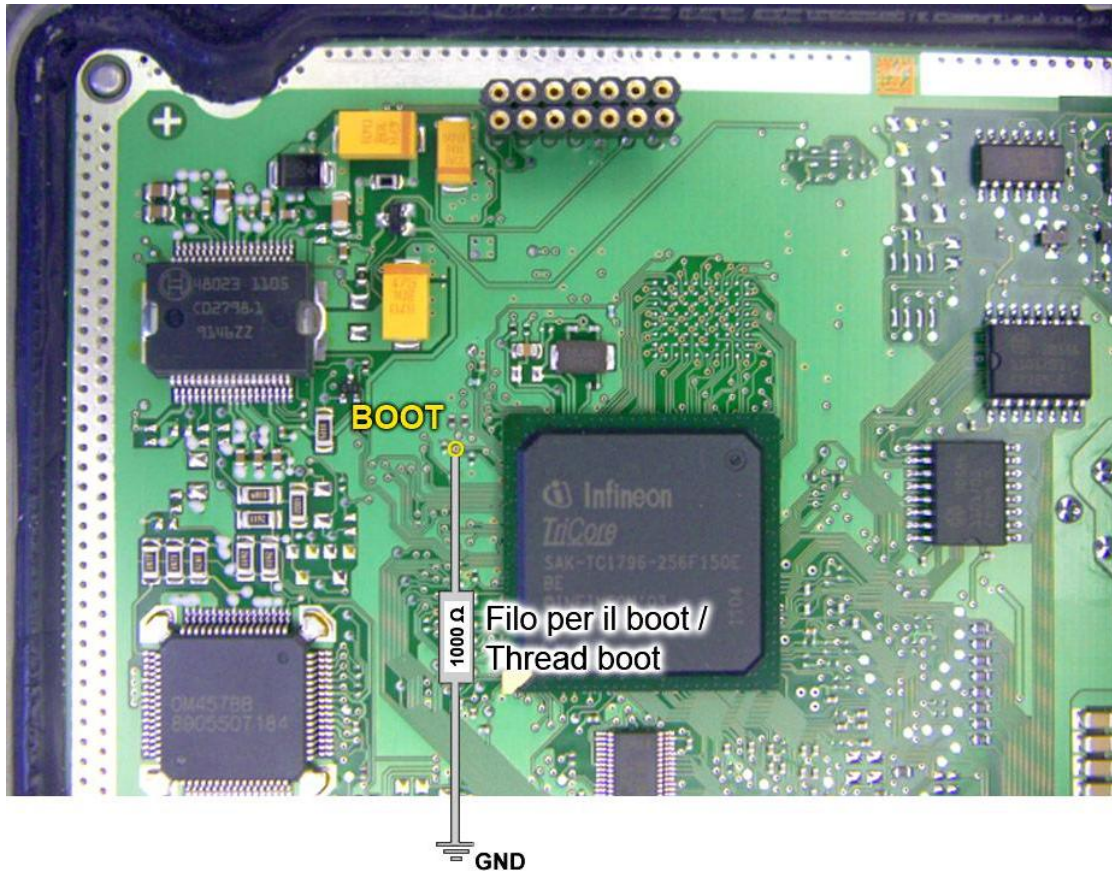


Picture4 MED17.1.1 PCB

3. VAG MED17.5 – TC1766 Internal Flash



Picture5 MED17.5terminal

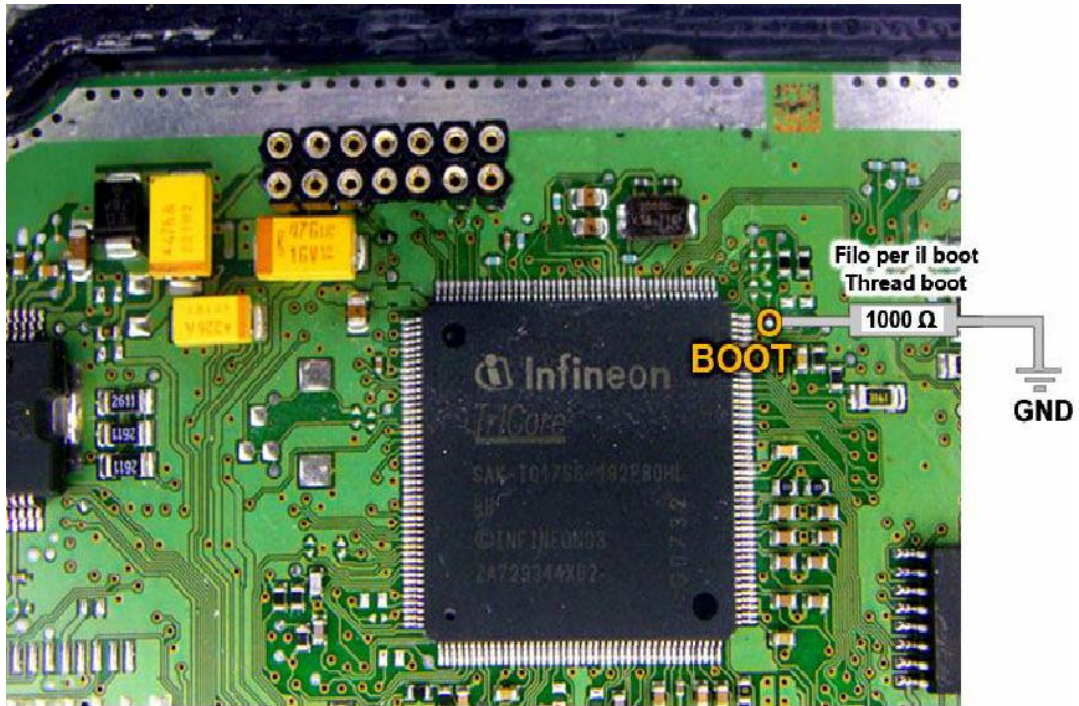

Picture6 MED17.5 PCB

4. VAG MED 17.5.1 – TC1796 Internal-External Flash



Picture7 MED17.5.1terminal




Picture8 MED17.5.1 PCB

5. VAG MED 17.5.2 – TC1767 Internal Flash



Picture9 MED17.5.2 terminal

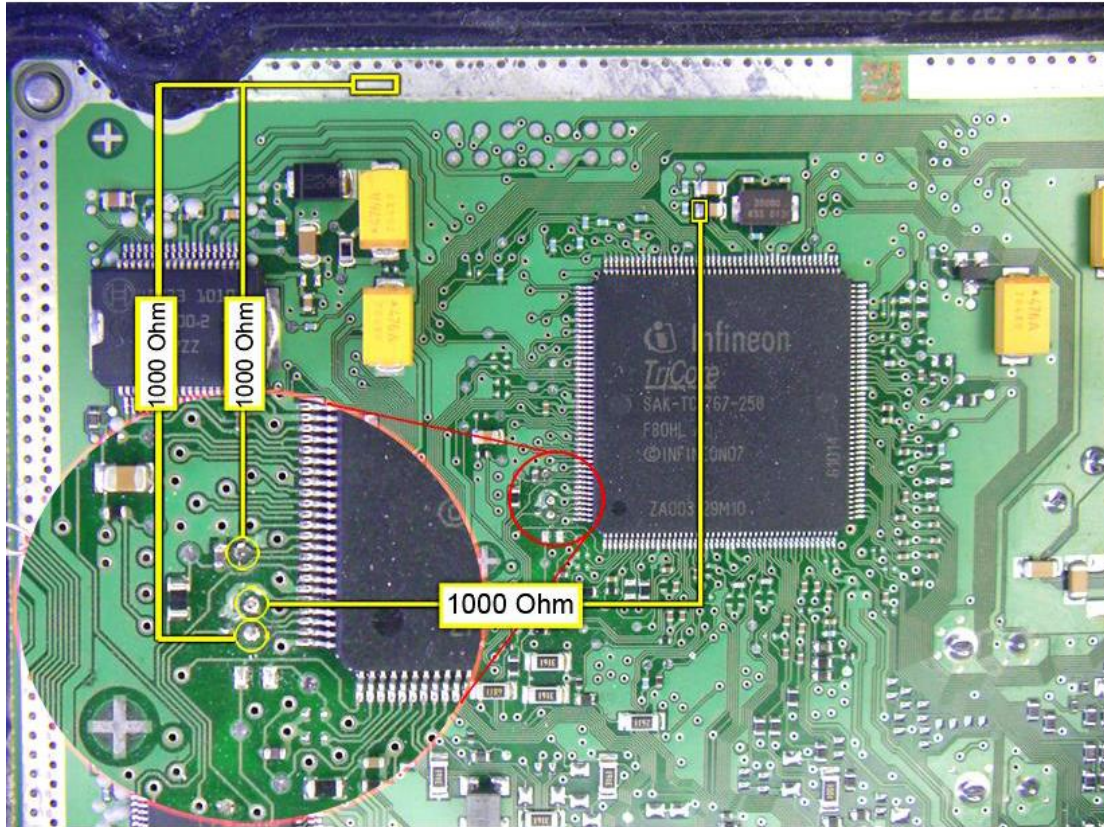

Picture10 MED17.5.2 PCB

6. VAG MED 17.5.5 - TC1766 Internal Flash




Picture11 MED17.5.5 terminal




Picture12 MED17.5.5 PCB

7. VAG MED 17.5.20 - TC1766 Internal Flash

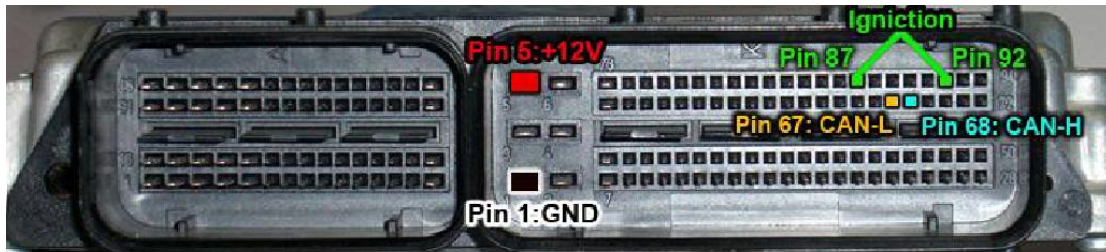

Picture13 MED17.5.20 terminal

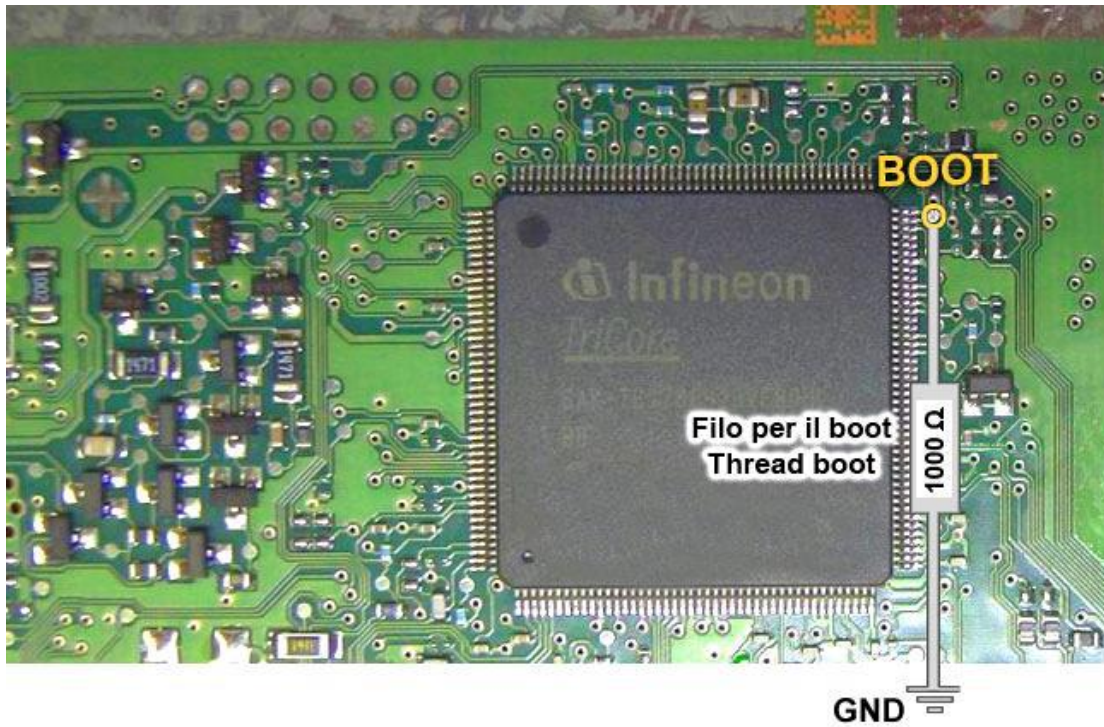

Picture14 MED17.5.20 PCB

8. VAG EDC17 CP14/CP20 - TC1796 Internal – External Flash



Picture15 EDC17 CP14/CP20 terminal




Picture16 EDC17 CP14/CP20 PCB

9. VAG EDC17 CP04 - TC1796 Internal Flash



Picture17 EDC17 CP04 terminal

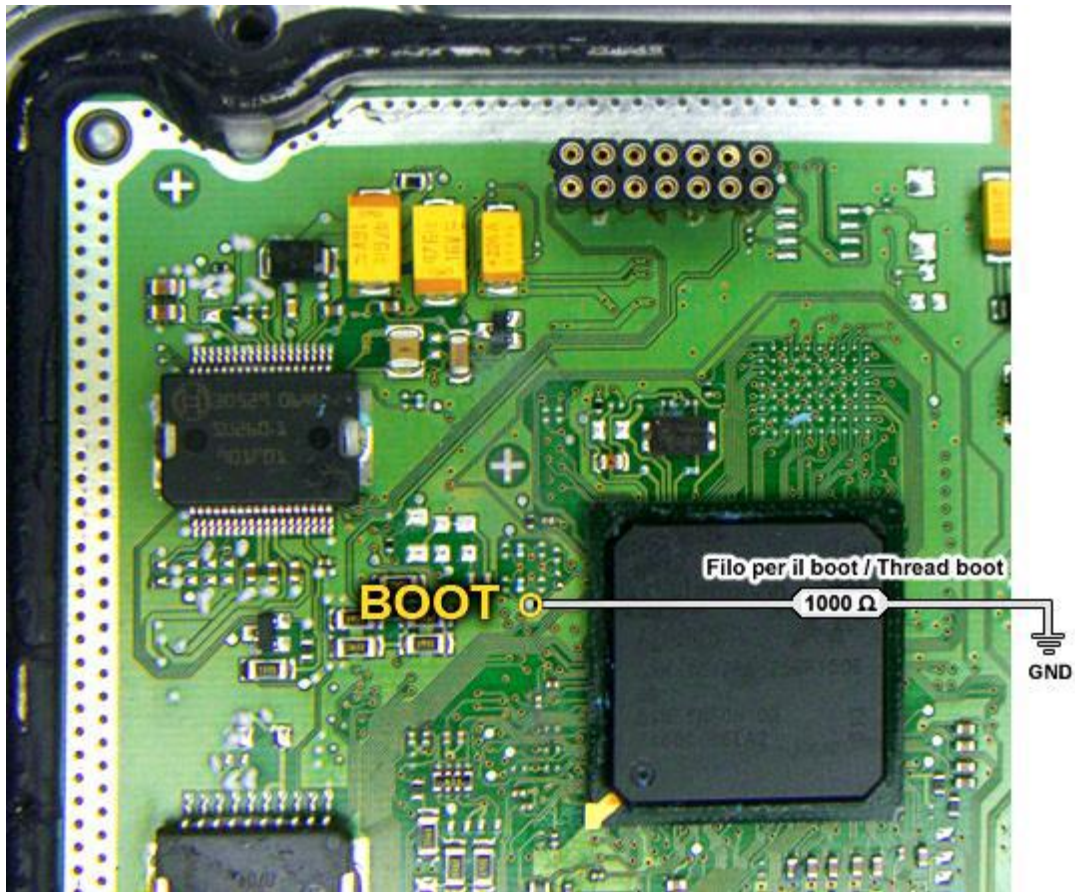


Picture18 EDC17 CP04 PCB

10. VAG EDC17 C46 – TC1767 Internal Flash



Picture19 EDC17 C46 terminal

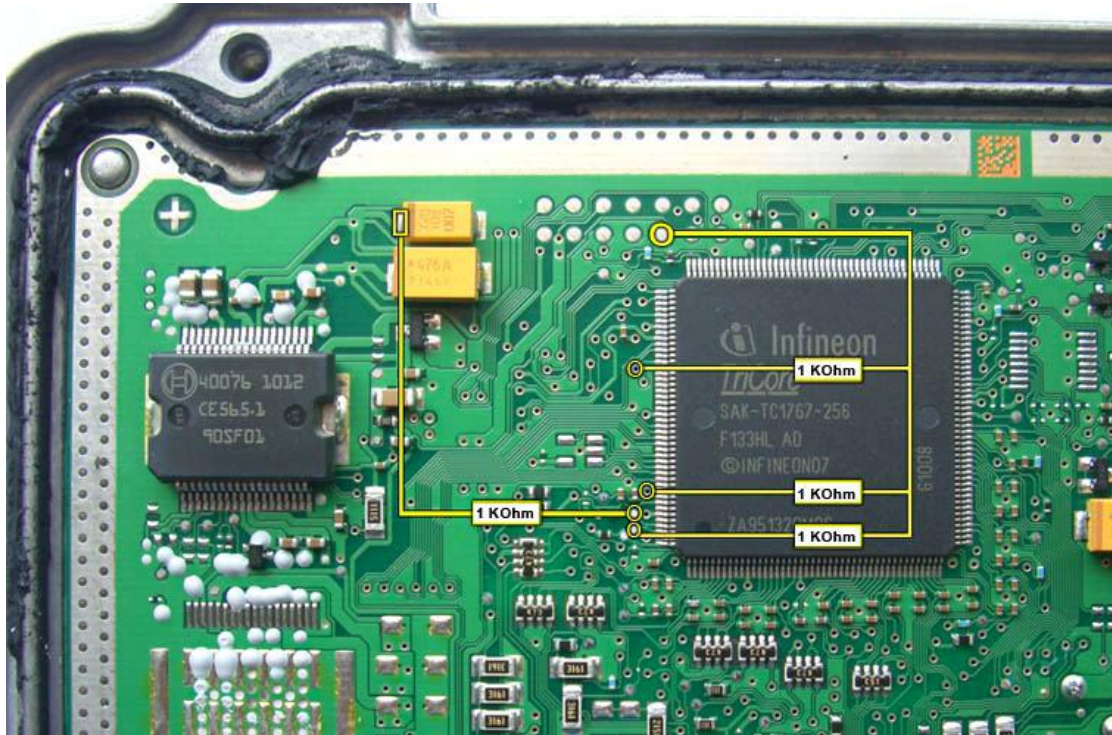


Picture20 EDC17 C46 PCB

11. VAG EDC17 CP24 – TC1796 Internal-External Flash




Picture21 EDC17 CP24 terminal

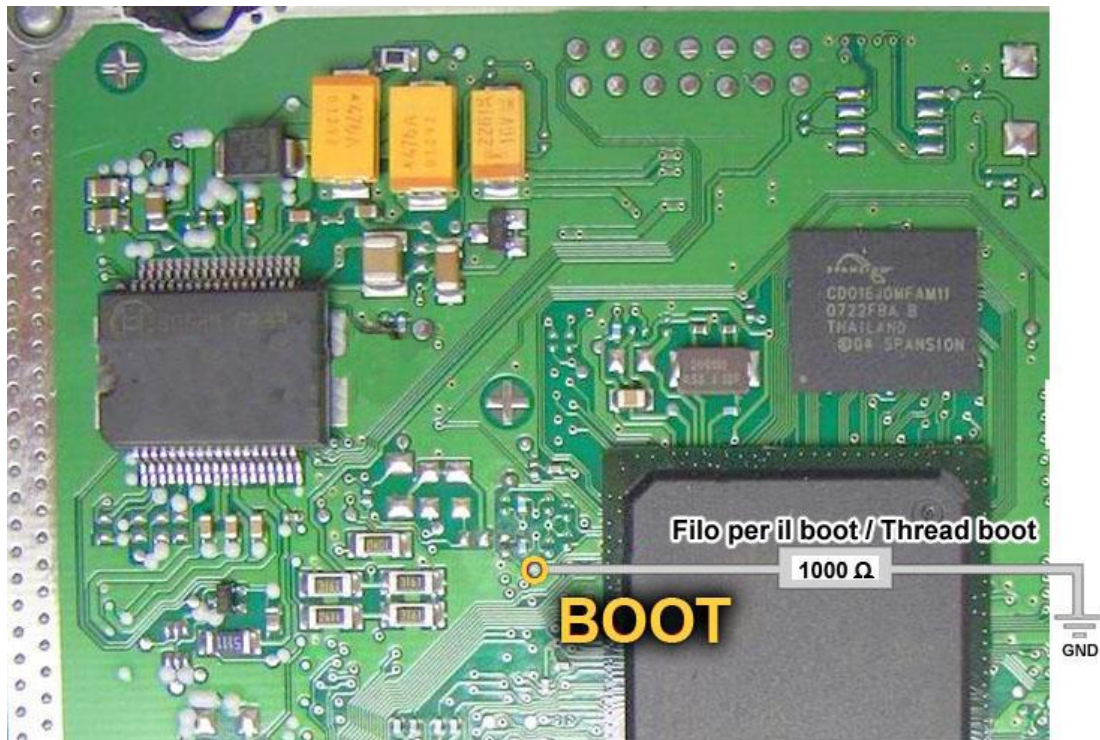


Picture22 EDC17 CP24 PCB

12. VAG EDC17 CP44 - TC1797 Internal Flash

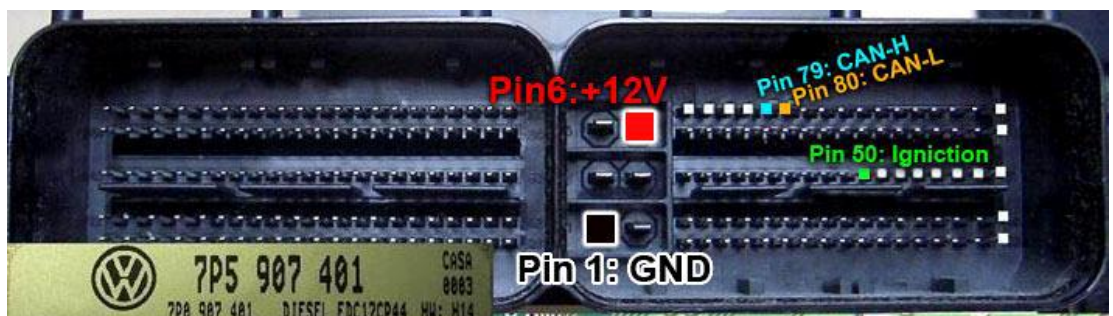

Picture23 EDC17 CP44 terminal

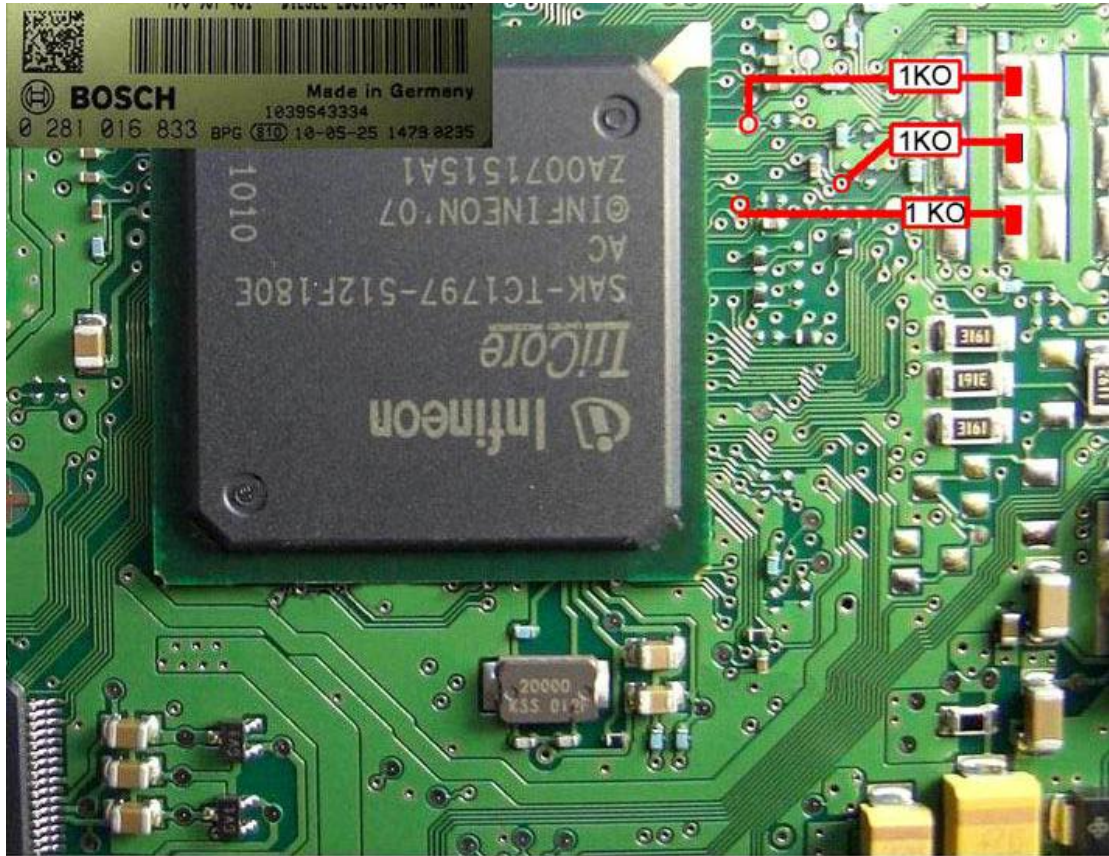


Picture24 EDC17 CP44 PCB

13. VAG EDC17 U01 - TC1766 Internal Flash



Picture25 EDC17 U01 terminal

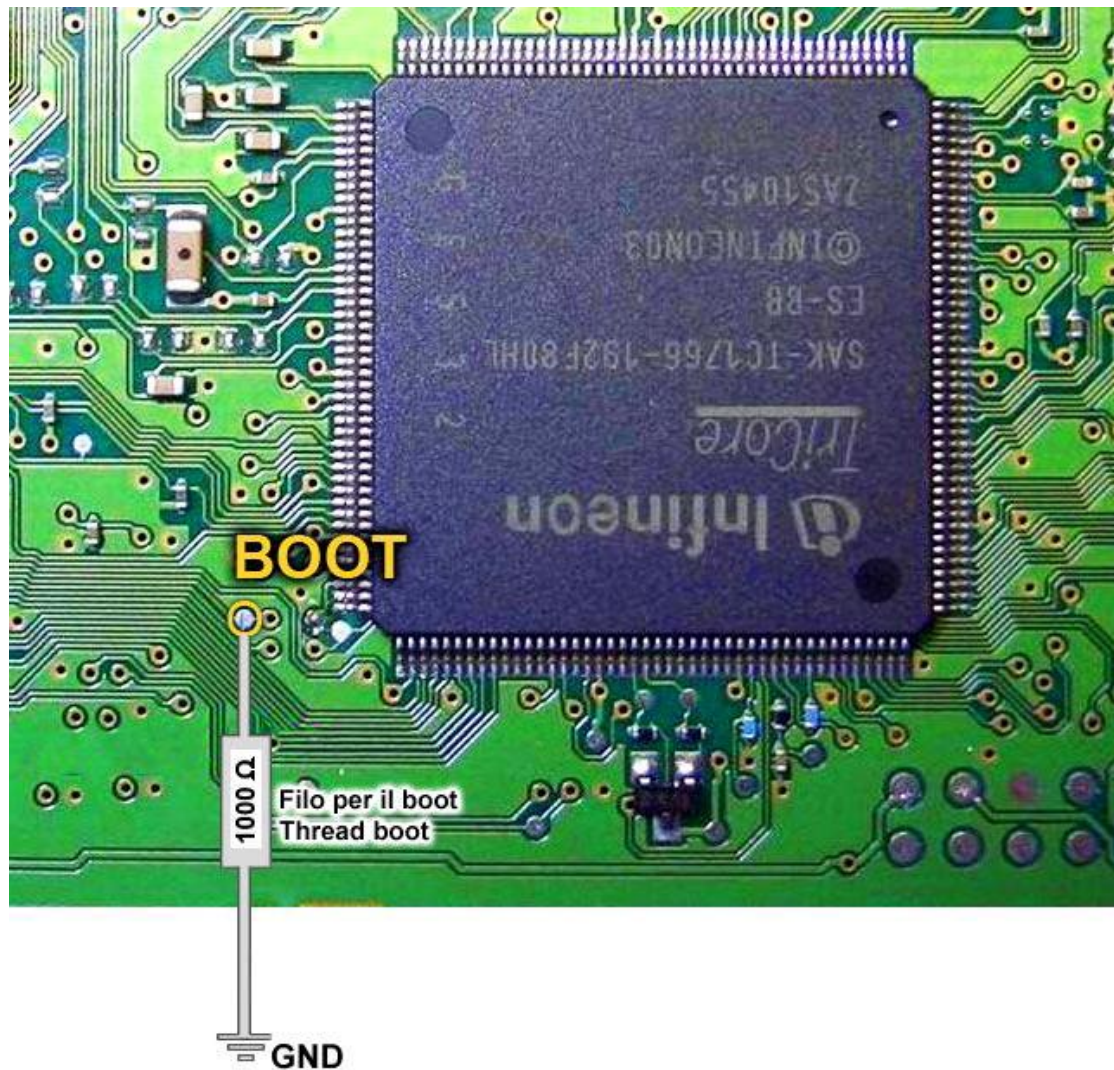


Picture26 EDC17 U01 PCB

14. VAG EDC17 U05 – TC1796 External Flash



Picture27 EDC17 U05 terminal

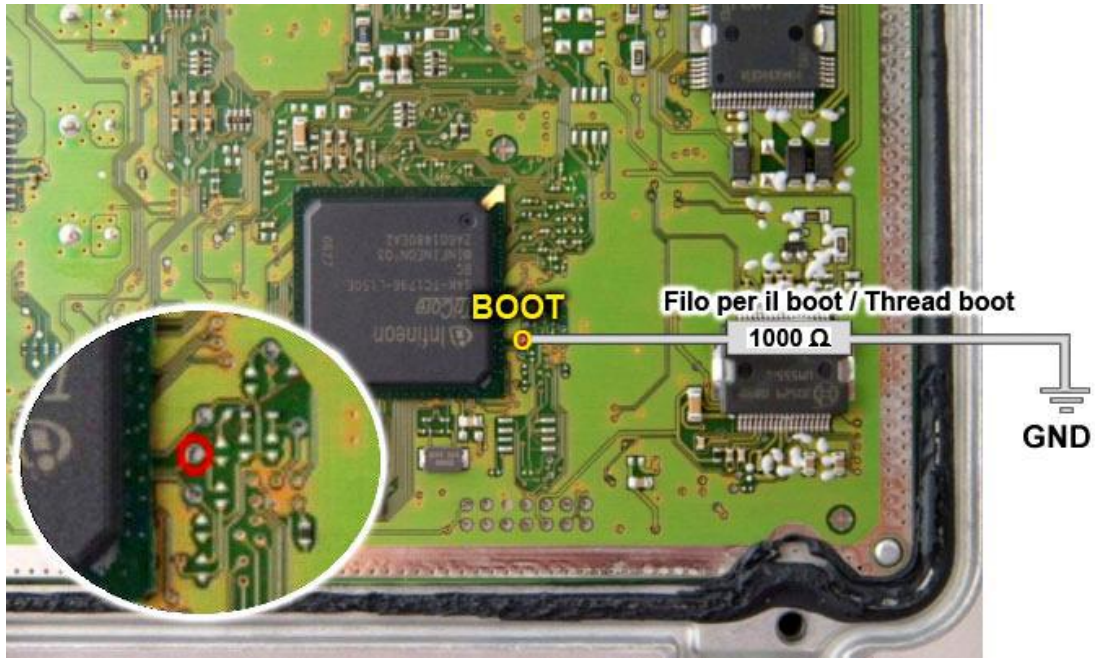


Picture28 EDC17 U05 PCB

15. VAG/Porsche Siemens Continental SDI 3 - TC1796 Internal-External Flash



Picture29 Siemens Continental SDI 3 terminal

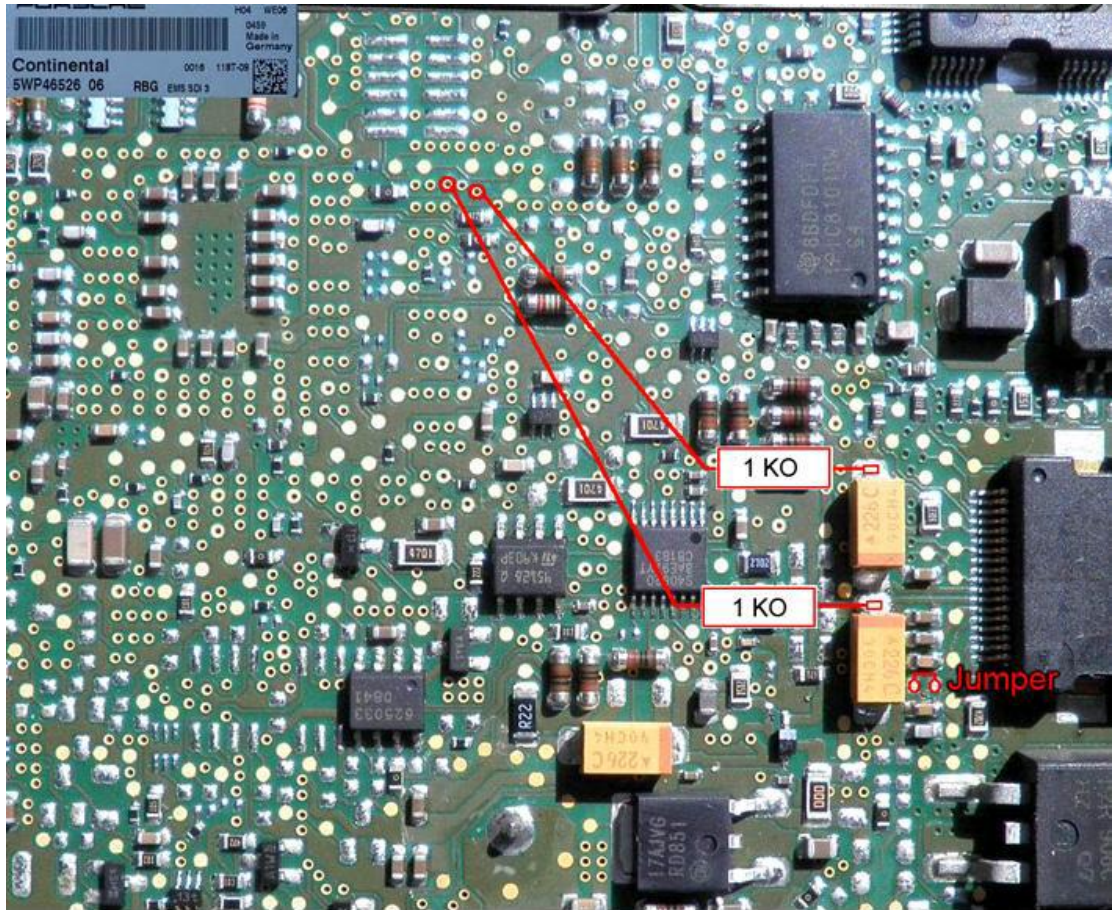

Picture30 Siemens Continental SDI 3 PCB

Note: Pay attention to the jumper